

HOW TO UPDATE THE UBIFAST CONFIGURATION TOOL



These instructions explain how to upgrade your existing UBIFAST Configuration Tool to the latest version. **Please use these instructions for Version 1.6.3 or higher.** For older versions, please contact your regional office at POSITAL.

Step 1

Unplug micro SD-card from UBIFAST. To do so, push the SD-card carefully inwards so that it is no longer locked in place (you will hear a quiet click sound). Once unlocked, gently remove from the slot. You do not need to remove any screws or the housing.



HOW TO UPDATE THE UBIFAST CONFIGURATION TOOL

Step 2

Connect this micro SD-card to your computer. You may need to use an SD-card adapter or a USB adapter to properly read the micro SD-card.




Step 3

Once connected to your computer, copy the recent update file titled “ubifastx.x.x.ucf” (“x” indicating the version number) to the update folder on the micro SD-card. The update folder will be found in the directory titled “SD-Crd”:\update\. Please note that “SD-Card” is the title of the drive.

You can download the update file directly from our website:

<https://www.posital.com/en/products/accessories/configuration-interface-modules/ubifast/ubifast.php>

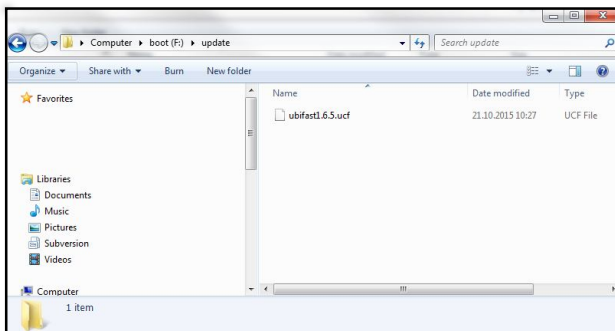

HOW TO UPDATE THE UBIFAST CONFIGURATION TOOL

Note: For smooth operation, please update files sequentially. For example, update Version 1.6.5 to Version 1.6.7 to Version 1.6.10 (based on the current version of your UBIFAST).

Step 4

Disconnect the micro SD-card from your computer and reinsert it into the SD-card slot on the UBIFAST. Make sure that the micro SD-card is inserted correctly and locked in place (you will again hear a quiet click sound).



Step 5

Simply power up the UBIFAST and the update file will automatically be installed. You can then use the UBIFAST Configuration Tool as usual. The version number will be shown on the webpage when the device is connected.